BRINKS COMMERCIAL

RESTROOM STALL HOOK
FIX-IT-KIT: BC40145

999-30147

Installation Instructions for Hardwood:

1. Place repair plate over desired/damaged location and level.
2. Ensure that holes on plate are not located on damage.
3. Mark all 7 holes for screw locations.
4. Drill pilot holes on marked holes using 7/64" Drill Bit.
5. Fasten repair plate with screws in the 4 corners. (4) Flat Head #6 x 3/4" screws.
6. Fasten Coat Hook using the remaining screw and hole locations.

Installation Instructions for Drywall:

1. Place repair plate over desired/damaged location and level.
2. Ensure that holes on the corners of the plate are not located on damage.
3. Mark all 4 corner holes.
4. Drill provided Drywall Anchors into screw locations.
5. Fasten Repair Plate to wall by screwing provided screws into Drywall Anchors.
6. Fasten Coat Hook to plate with screws provided.

Tools Required:

Pencil, #2 Phillips Screwdriver, drill, 7/64" drill bit

Working Load:

45 LBS

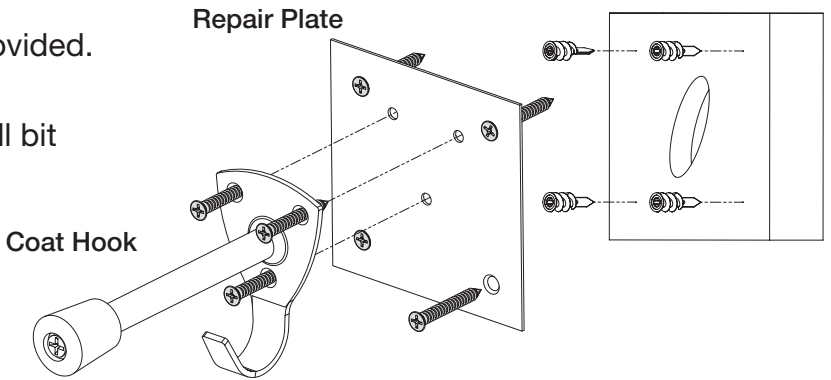

50 Icon, Foothill Ranch, CA 92610-3000
Warranty/Support: 1-866-LOCK-PRO (1-866-562-5776)
www.brinkscommercial.com
©2025 Hampton Products International Corp.
999-30147_REVB 08/25

BRINKS COMMERCIAL

KIT DE REPARACIÓN DE GANCHOS PARA COLGAR PARA BAÑOS: BC40145

999-30147

Instrucciones para la instalación en madera dura:

1. Coloque la placa de reparación sobre la ubicación deseada/dañada y nivele.
2. Asegúrese de que los orificios de la placa no estén sobre la zona dañada.
3. Marque los 7 orificios para ubicar los tornillos.
4. Perfore los orificios piloto sobre las marcas utilizando una broca de 3 mm (7/64").
5. Fije la placa de reparación con tornillos en las 4 esquinas. (4) Tornillos de cabeza plana n.º 6 x 1,8 cm (3/4").
6. Fije el gancho para colgar abrigos usando los tornillos y orificios restantes.

Instrucciones para la instalación en paneles de yeso:

1. Coloque la placa de reparación sobre la ubicación deseada/dañada y nivele.
2. Asegúrese de que los orificios en las esquinas de la placa no estén dañados.
3. Marque los 4 orificios de las esquinas.
4. Taladre los anclajes para paneles de yeso provistos en las ubicaciones de los tornillos.
5. Fije la placa de reparación a la pared atornillando los tornillos provistos en los anclajes para paneles de yeso.
6. Fije el gancho para colgar abrigos a la placa con los tornillos provistos.

Herramientas necesarias:

Lápiz, destornillador Phillips n.º 2, taladro, broca de 3 mm (7/64")

Carga de trabajo:
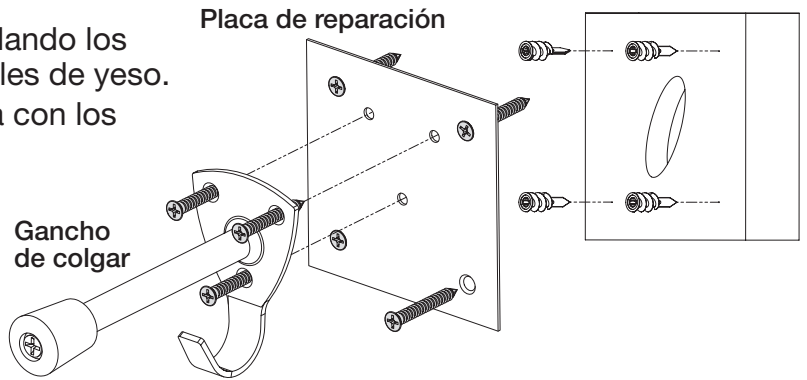
20,4 kg (45 libras)